

MONTAGEANWEISUNG BEACHTEN !


ACHTUNG

Innere Schaltung darf
nicht verändert werden !



r1 1.2kW/~230V

r2 1.6kW/~230V



r3 1.6kW/~230V

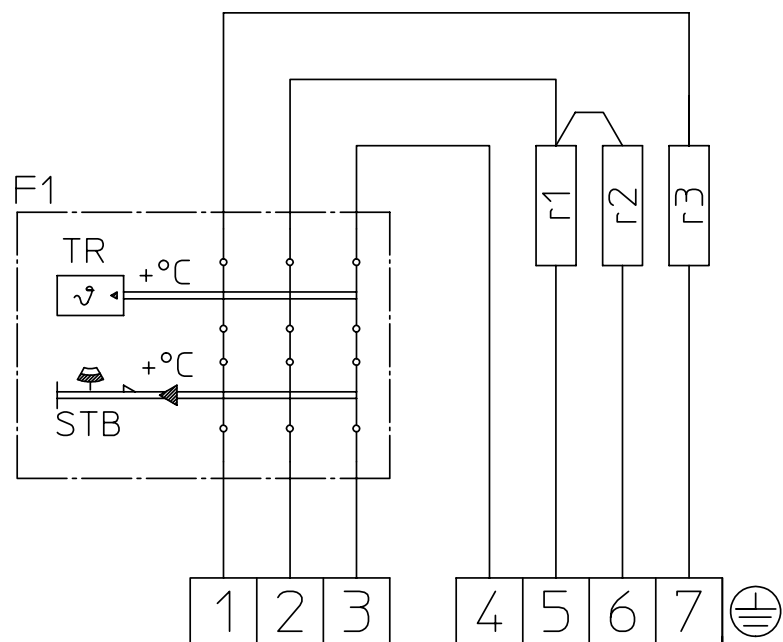



EBH-US 2.4kW

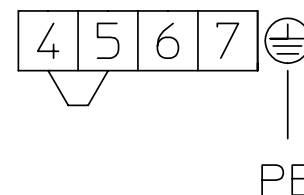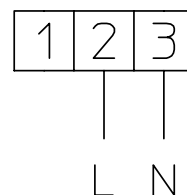

1,2kW / 8h
~230V

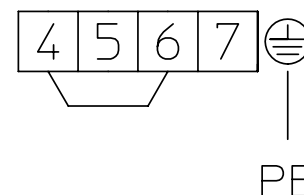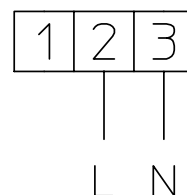

1,6kW / 6h
~230V

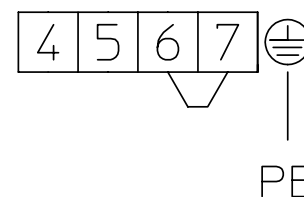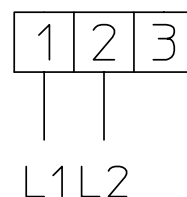

2,4kW / 4h
2~400V

M045/174474_EBH-US1_2,4kW