


Vertical decorative wall

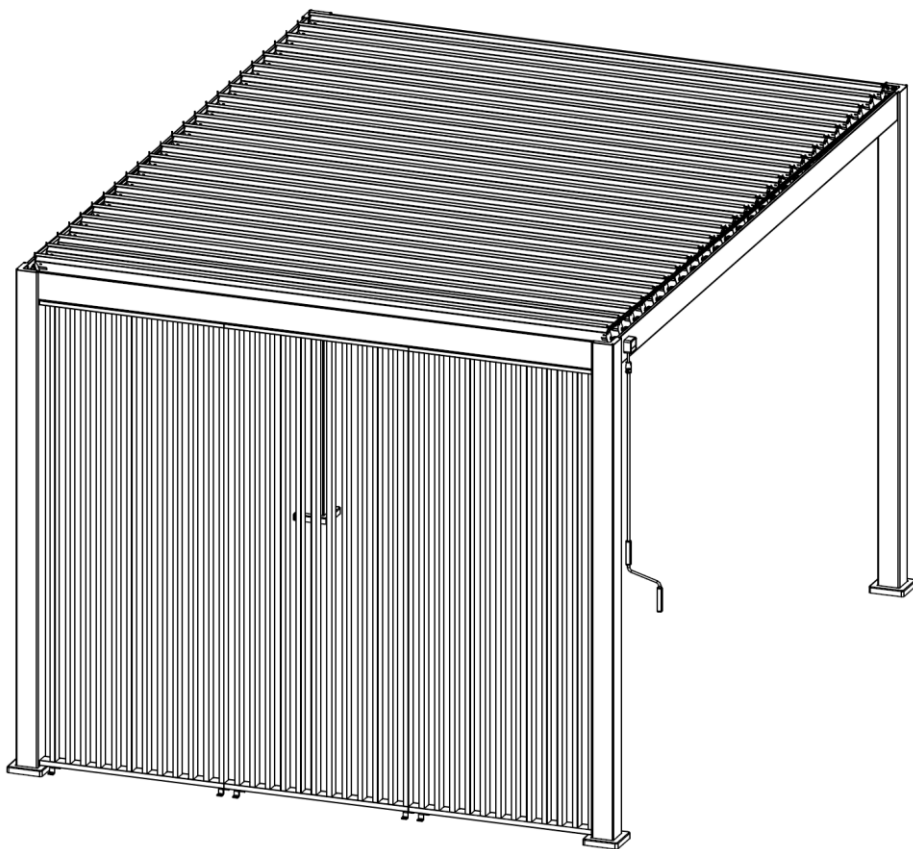

e-mail: info@zhengte.eu



The tools you need:



Glove



Knife




Safety hat



Electric screw driver



Percussion drill

**A****B****C****D****E**

ST5.5x50

**F**

8x40

**G**

ST4.8x25

**H**

ST4.2x25

QTY
for 3M wallQTY
for 3.6M wallQTY
for 4M wall**A**

1

1

1

B

2

2

2

C

12

15

16

D

2

2

2

E

4

4

4

F

4

4

4

G

2

2

2

H

42

48

50





B x2

3M wall

C x12

3.6M wall

C x15

4M wall

C x16



3M wall


H x28

3.6M wall

H x34

4M wall

H x36

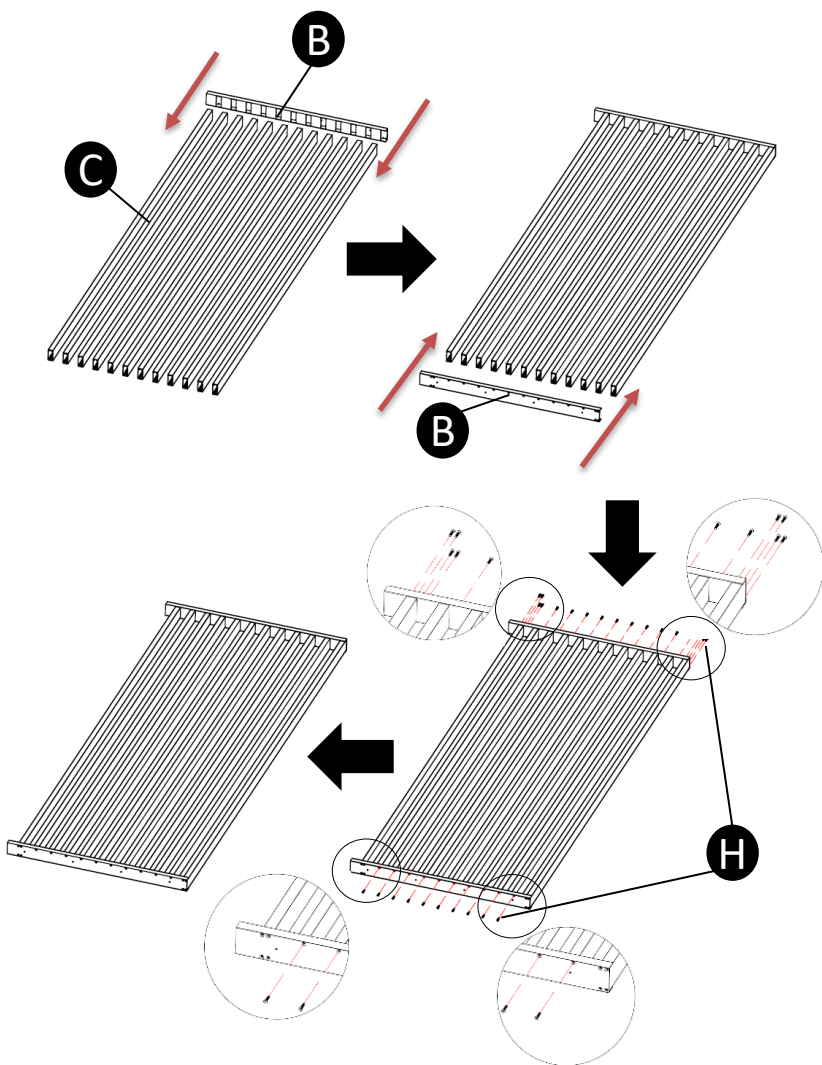



2



There are 2 options for the installation of top cover (REF A), you can install it on request.



A x1




H x4

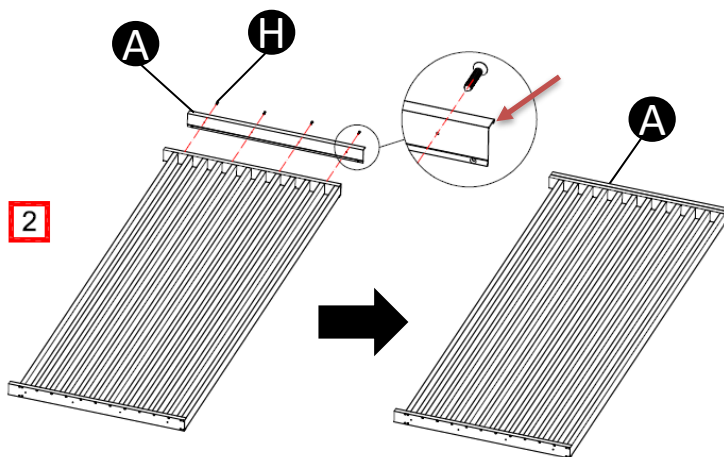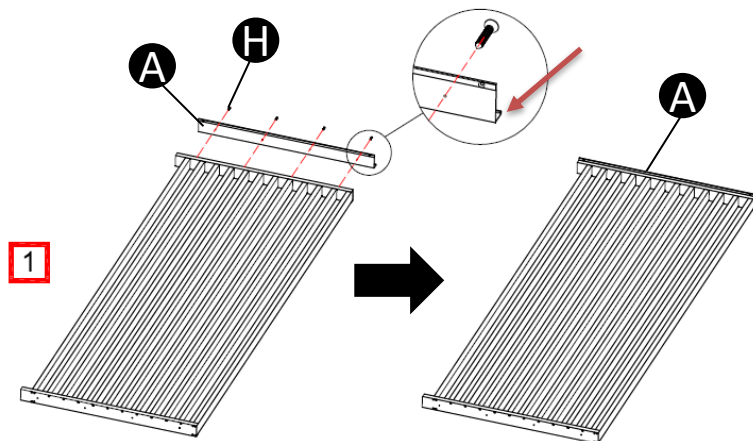



3

Install the aluminium foot pad (REF D) to the bottom of the vertical decorative wall.
If you install three vertical decorative walls, then the third (c) vertical decorative wall next to the legs of the pergola do not need an aluminium foot pad (REF D).

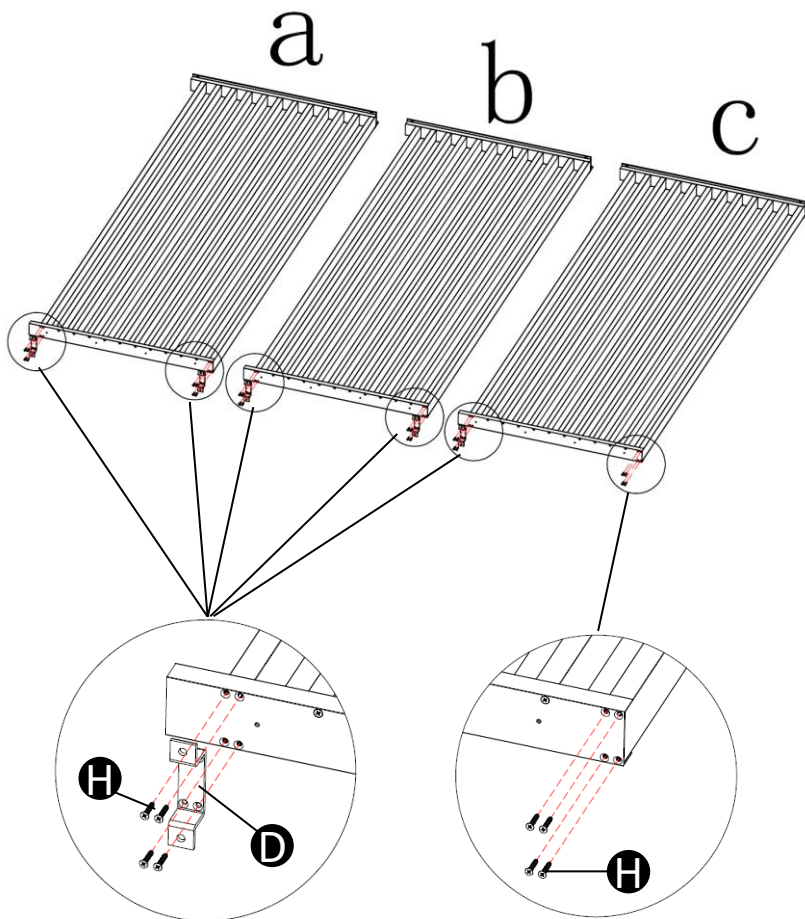


D x5



H x24



Fx10

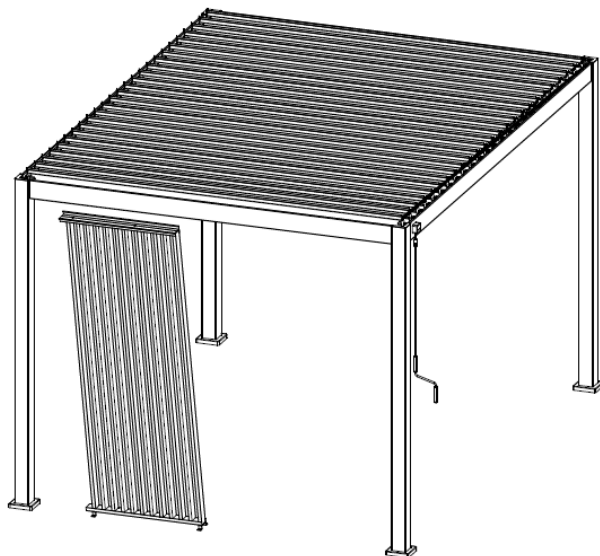



Draw lines,drill holes,tap in plastic expansion pipe.

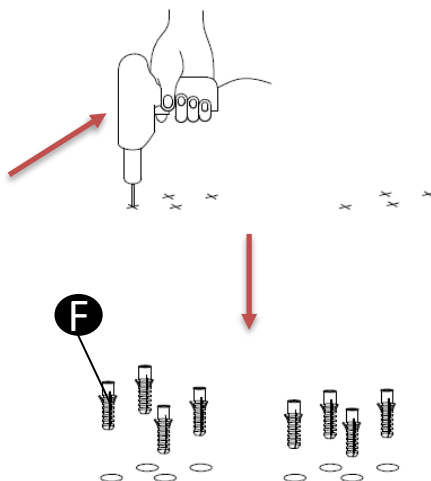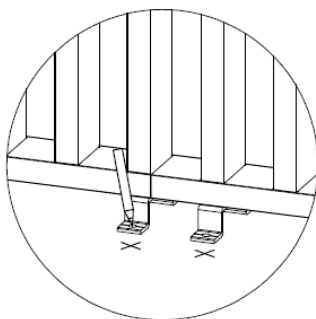

If the floor is a wooden floor,you don't need to knock in the plastic expansion pipe(REF F), use self tapping screw (REF E) to knock in the floor directly.



5

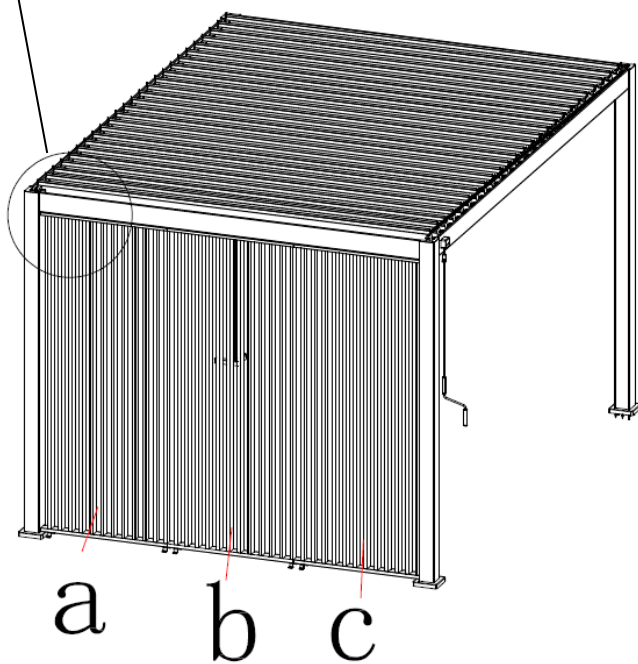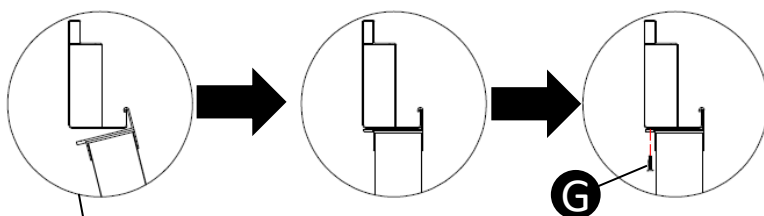



6



Ex10

