



MONTAGEANLEITUNG






Meeth
FENSTER UND TÜREN

Schiebetüren

Stand: 11/2019

www.meeth.de



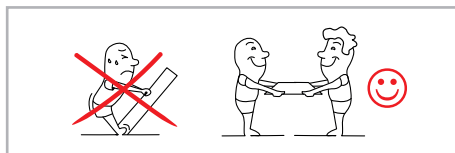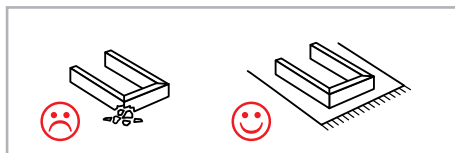

001 (4x)



018 (1x)
[4,50 m]



006 (2x)



007 (1x)



008 (20x)



009 (8x)



003 (8x)

[35 mm]



004 (2x)

[30 mm]




005 (4x)




[80 mm]

010 (8x)

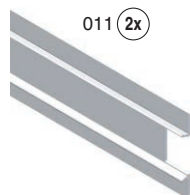

011 (2x)

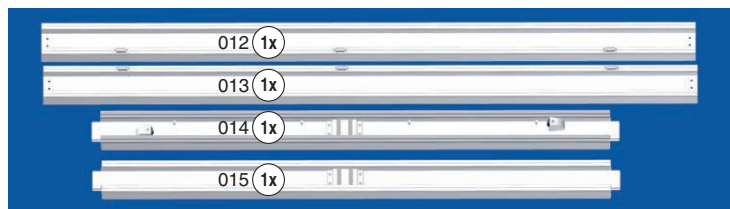


012 (1x)

013 (1x)


014 (1x)

015 (1x)

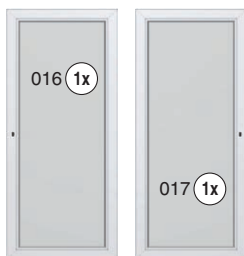

016 (1x)

017 (1x)

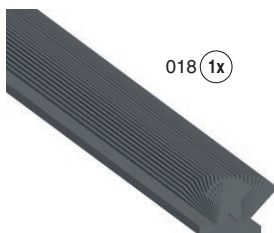


018 (1x)




019 (2x)


01

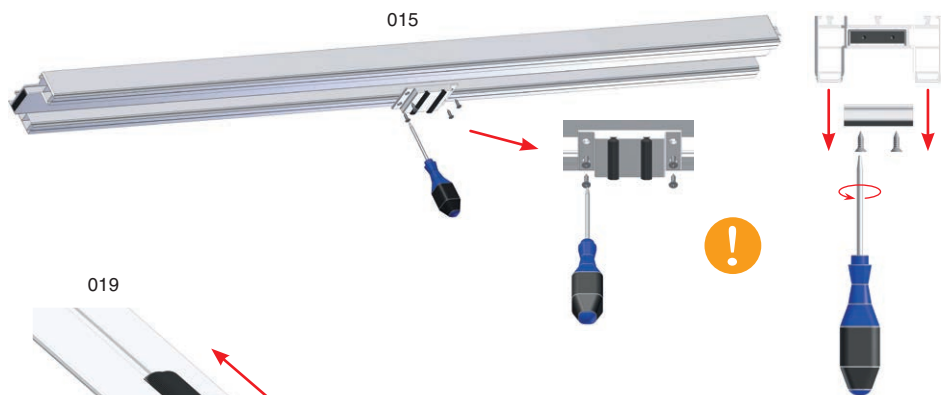


02

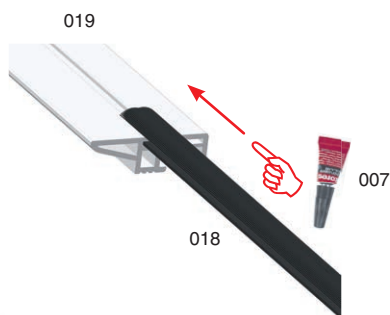

03

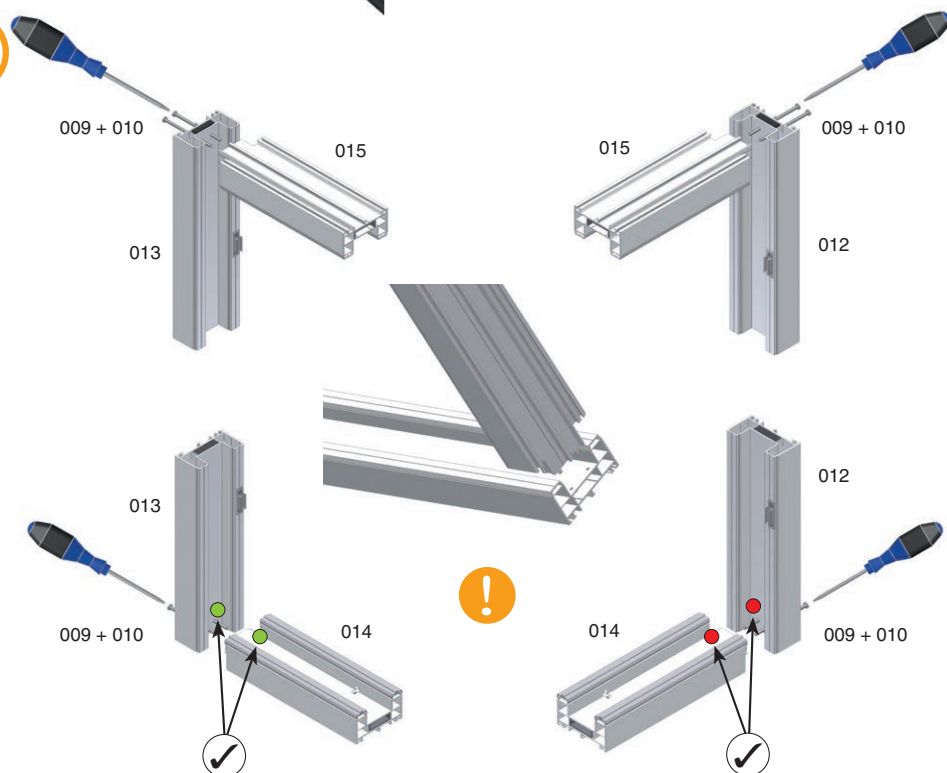


04

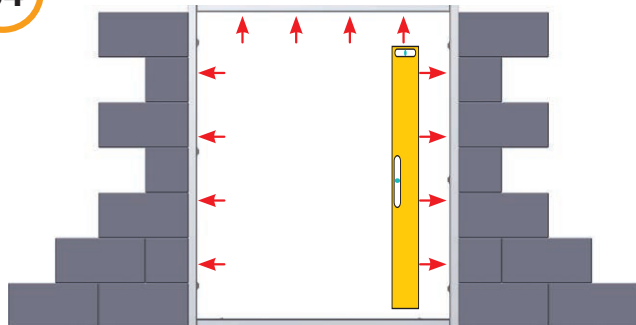

Wasserwaage (Länge) mind. 180 cm


Montagehilfe:
3 Stützleisten

A = B = C

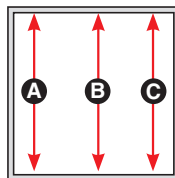

Diagonale
Vermessung

d1 = d2

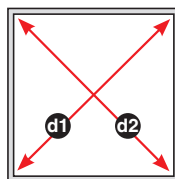

05




008




018 + 019


06

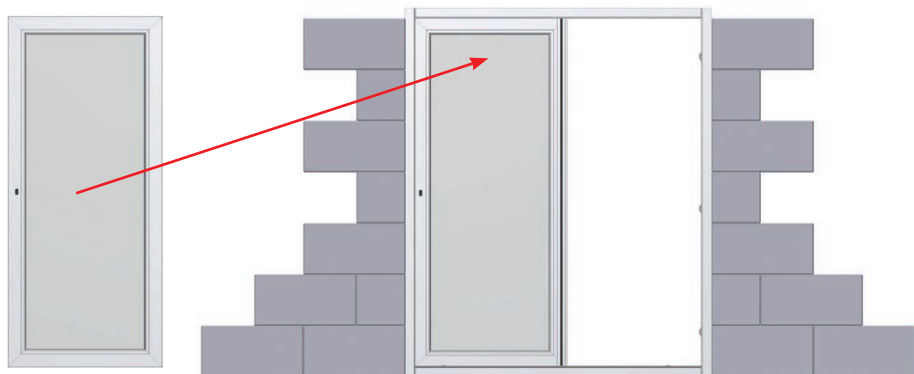

07

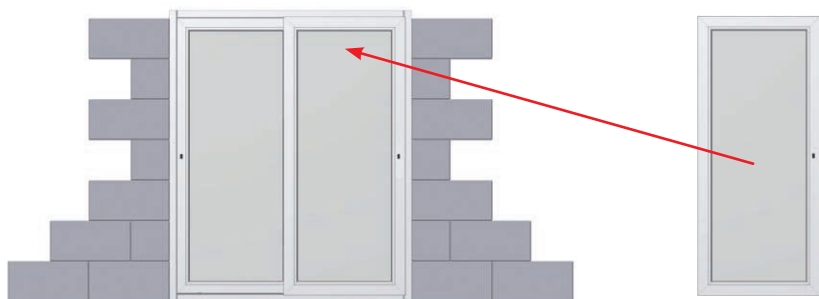


08

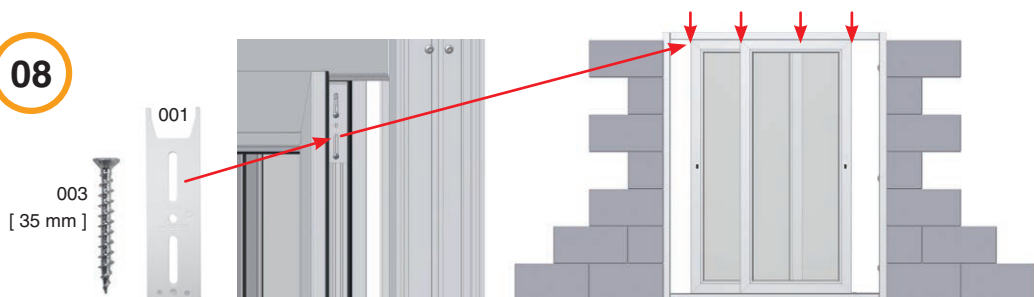


AUSHEBESICHERUNGEN: A) Höhe 1,90 m = 2 Stück montieren B) Höhe größer als 1,90 m = 4 Stück montieren


09

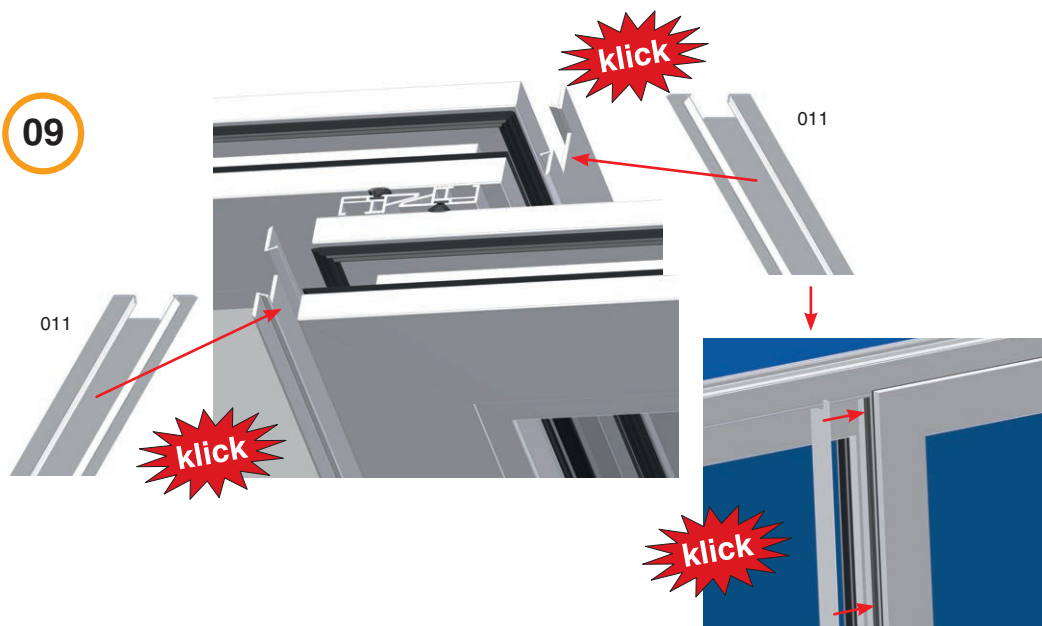


10

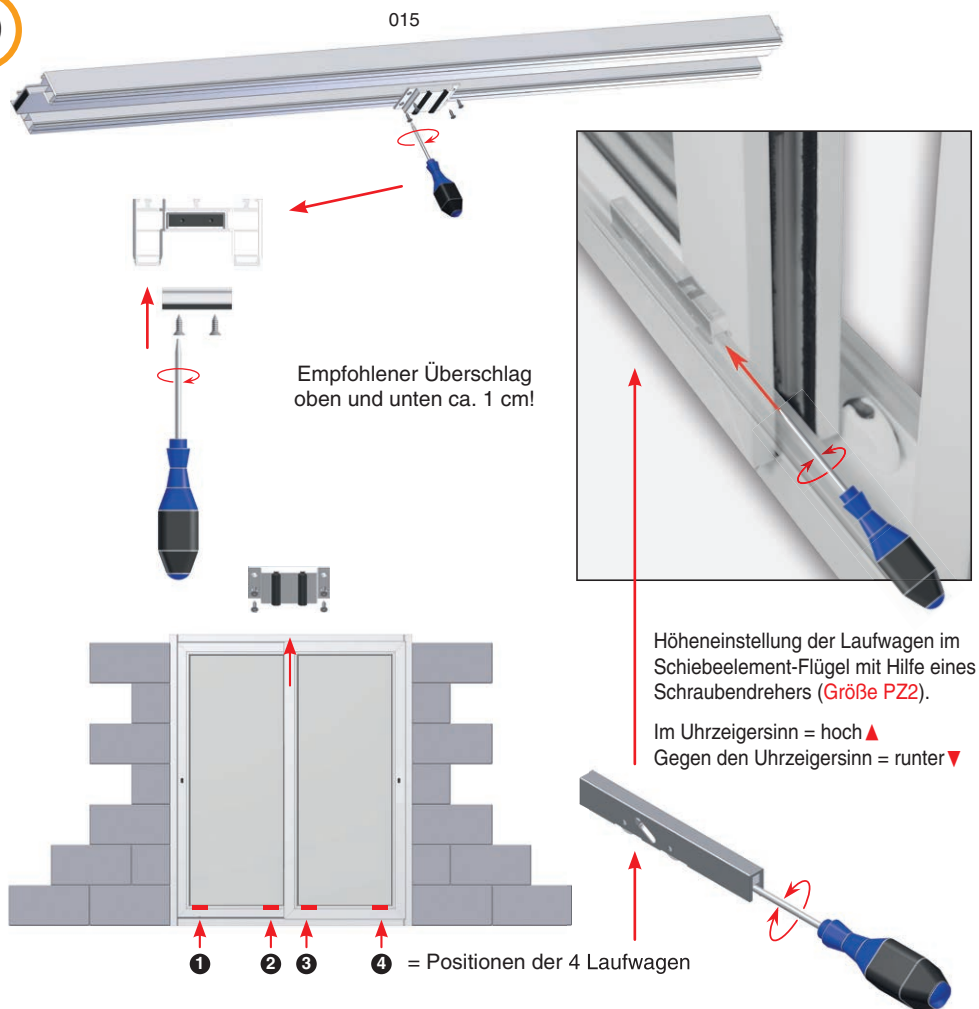

11

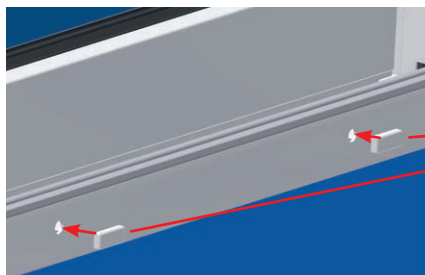

12

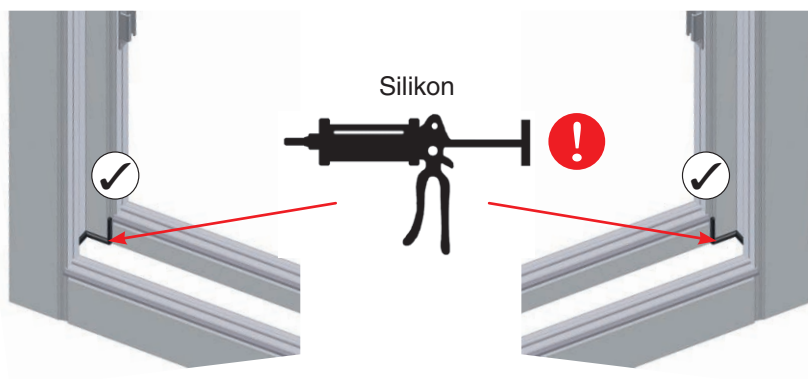

Stopper Einbau



Stopper positionieren (006)



Stopper einsetzen



Gummiabdeckung **nur anheben**



Schrauben positionieren (004)



Stopper mit Schraube befestigen



Gummiabdeckung schließen



Die neue **Meeth App** jetzt kostenlos downloaden:



Josef Meeth Fensterfabrik GmbH & Co. KG

54533 Laufeld • Telefon: 06572 / 81-0 • www.meeth.de