



INSTRUCTIONS Pizza Oven

Model No.:KU-010W

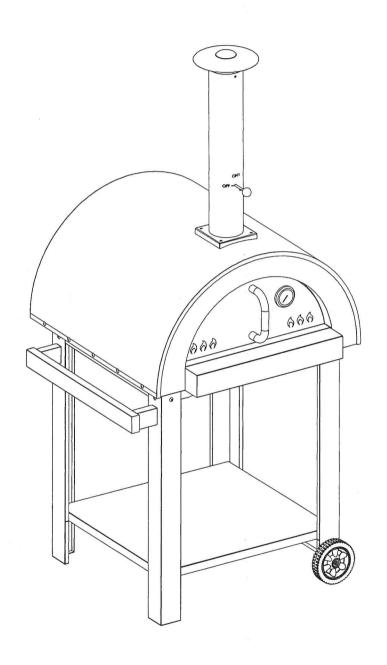




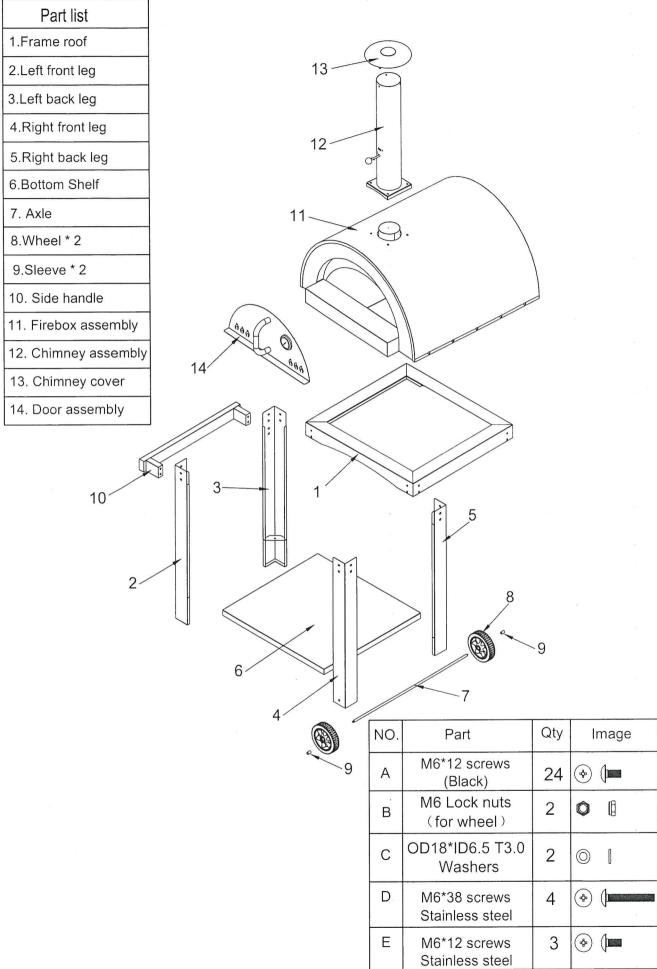

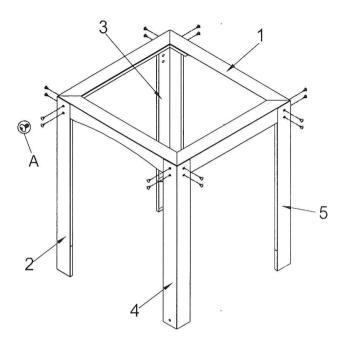


- 1-1: Attach the left front leg(2) to the frame roof (1) with four M6x12 screws (A);
- 1-2: Attach the left back leg(3) to the frame roof (1) with four M6x12 screws (A);
- 1-3: Attach the right front leg (4) to the frame roof (1) with four M6x12 screws (A);
- **1-4:** Attach the right back leg (5) to the frame roof (1) with four M6x12 screws (A); Partially tighten each screw with a screwdriver.(as show)

Step2

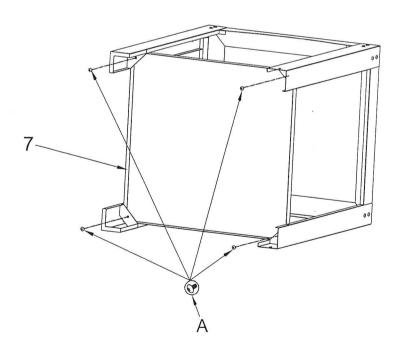


Slide the bottom shelf (6) into the corresponding position of each legs with four M6x12 screws (A) tighten by hand. (as show)

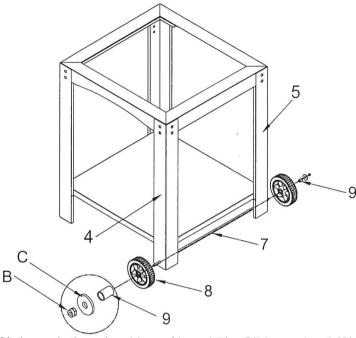


Slide the axle (9) through the wheel legs (4 and 5), Slide a wheel (8) and Sleeve (10) and Flat washer (C) onto axle end, Thread two M6 lock nuts(B) onto each long end and tighten with a wrench. The wheel should spin, but not wobble.

Step4

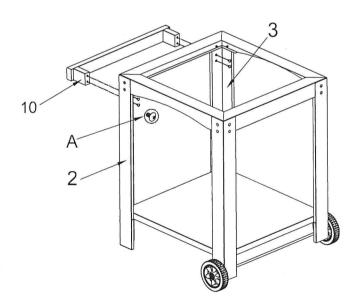


Slide the Side handle (10) onto Left front leg (2) and left back leg(3) with four M6*12 screws(A) tighten by hand.

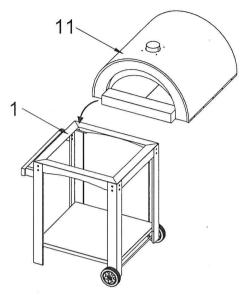


The firebox assembly (11) is lifted and onto the corresponding position of the frame roof(1)

Step6

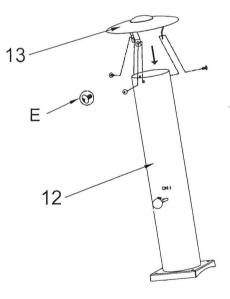


Slide the chimney cover (13) onto the chimney assembly(12) with three M6*12 screws(E) tighten by hand.

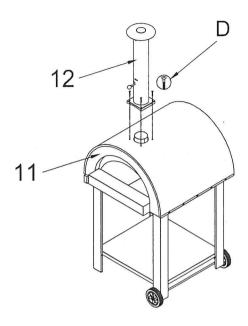


Slide the chimney assembly (12) onto firebox assembly(11) whit four M6*38 screws(C) tighten by hand.

Step8

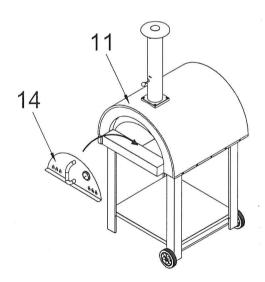

Slide the door assembly (14) onto the corresponding position of the firebox assembly(11)

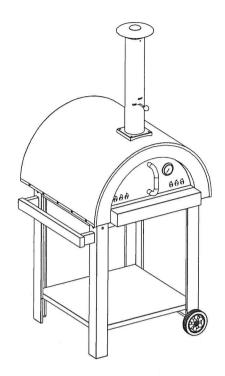

Now, your oven is ready for use. Enjoy your time!